


HOME DECORATORS COLLECTION

BF-25065 WIDE BASE CABINET WITH UTILITY SINK & TWO DOORS

INV#13633








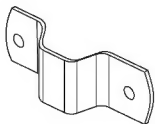

ASSEMBLY INSTRUCTIONS

Made In China

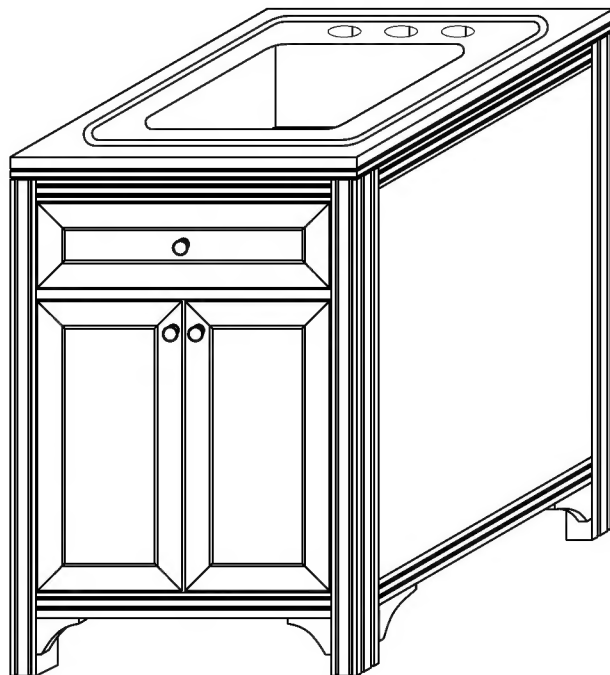


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


| PARTS LIST | | |
|---|---|---|
| A  CABINET-1PC | B  SHELF-1PC | C  SHELF SUPPORTS-4PCS |
| D  FEET-4PCS | E 7mm× 7/8"  SCREWS-4PCS | F  GECKOS-4PCS |
| G 6mm× 3/4"  SCREWS-4PCS | H  HOOKS-4PCS | I  PLASTIC BELTS-2PCS |
| | | |

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

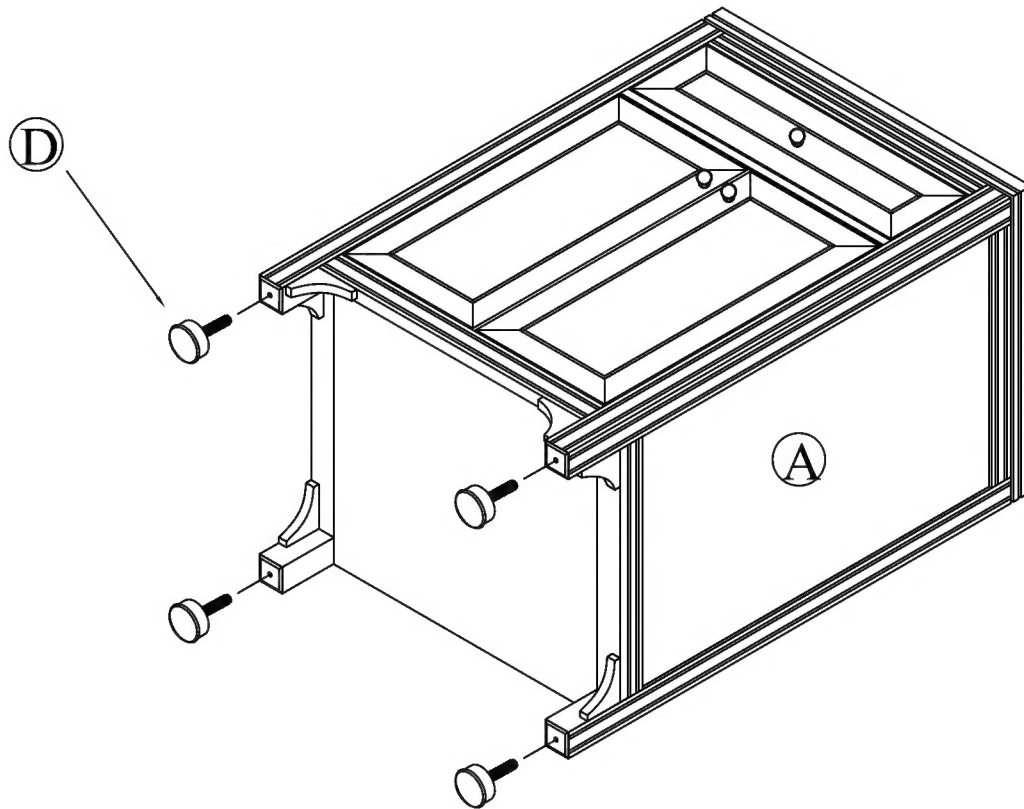


1) . ASSEMBLE THE FEET(D) .

- ROTATE THE FEET(D) INTO THE HOLES IN THE CABINET(A) .

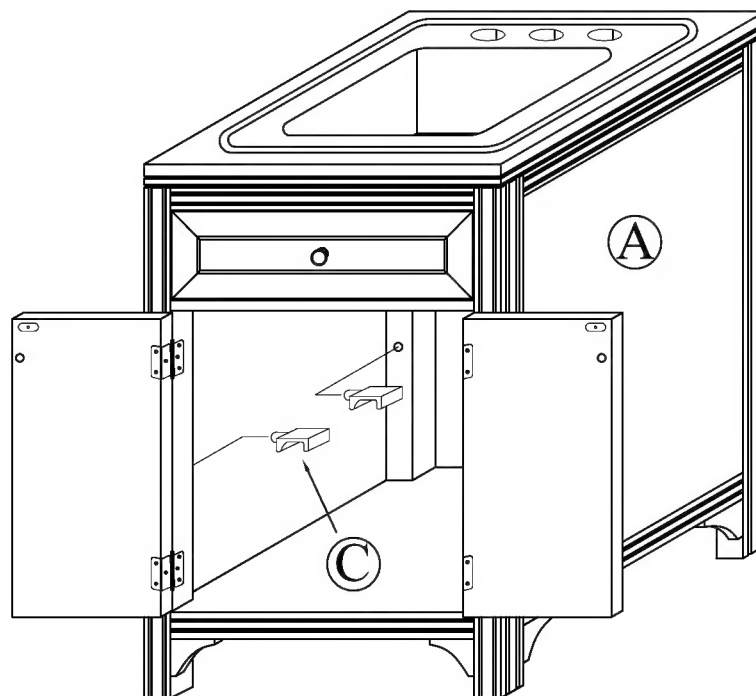

2) . ASSEMBLE THE SHELF SUPPORTS(C) .

- INSERT 4 SHELF SUPPORTS(C) INTO THE HOLES IN THE CABINET(A) .

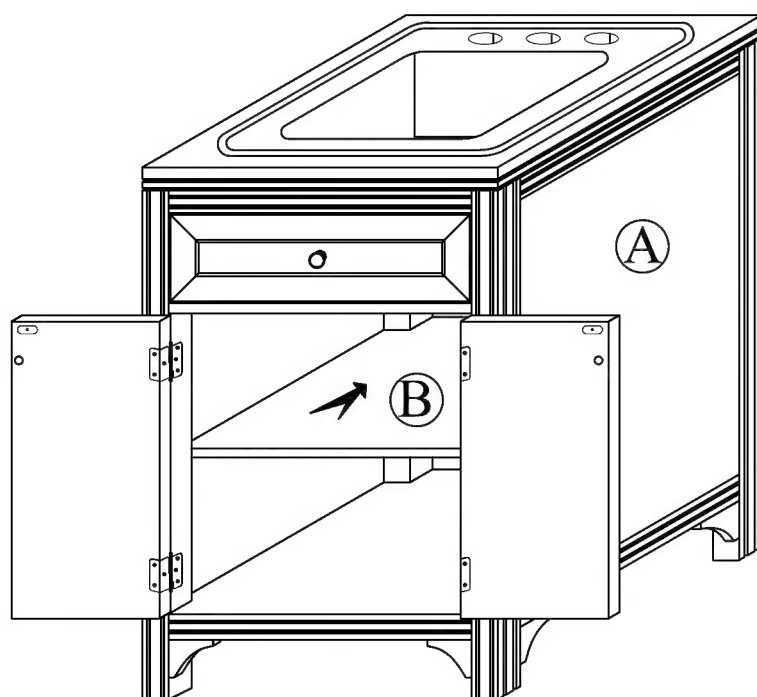


3) . ASSEMBLE THE SHELF(B) .

- PLACE THE SHELF(B) ONTO THE SHELF SUPPORTS(C) .


Warning

The anti-tip hardware must be used as part of assembly!

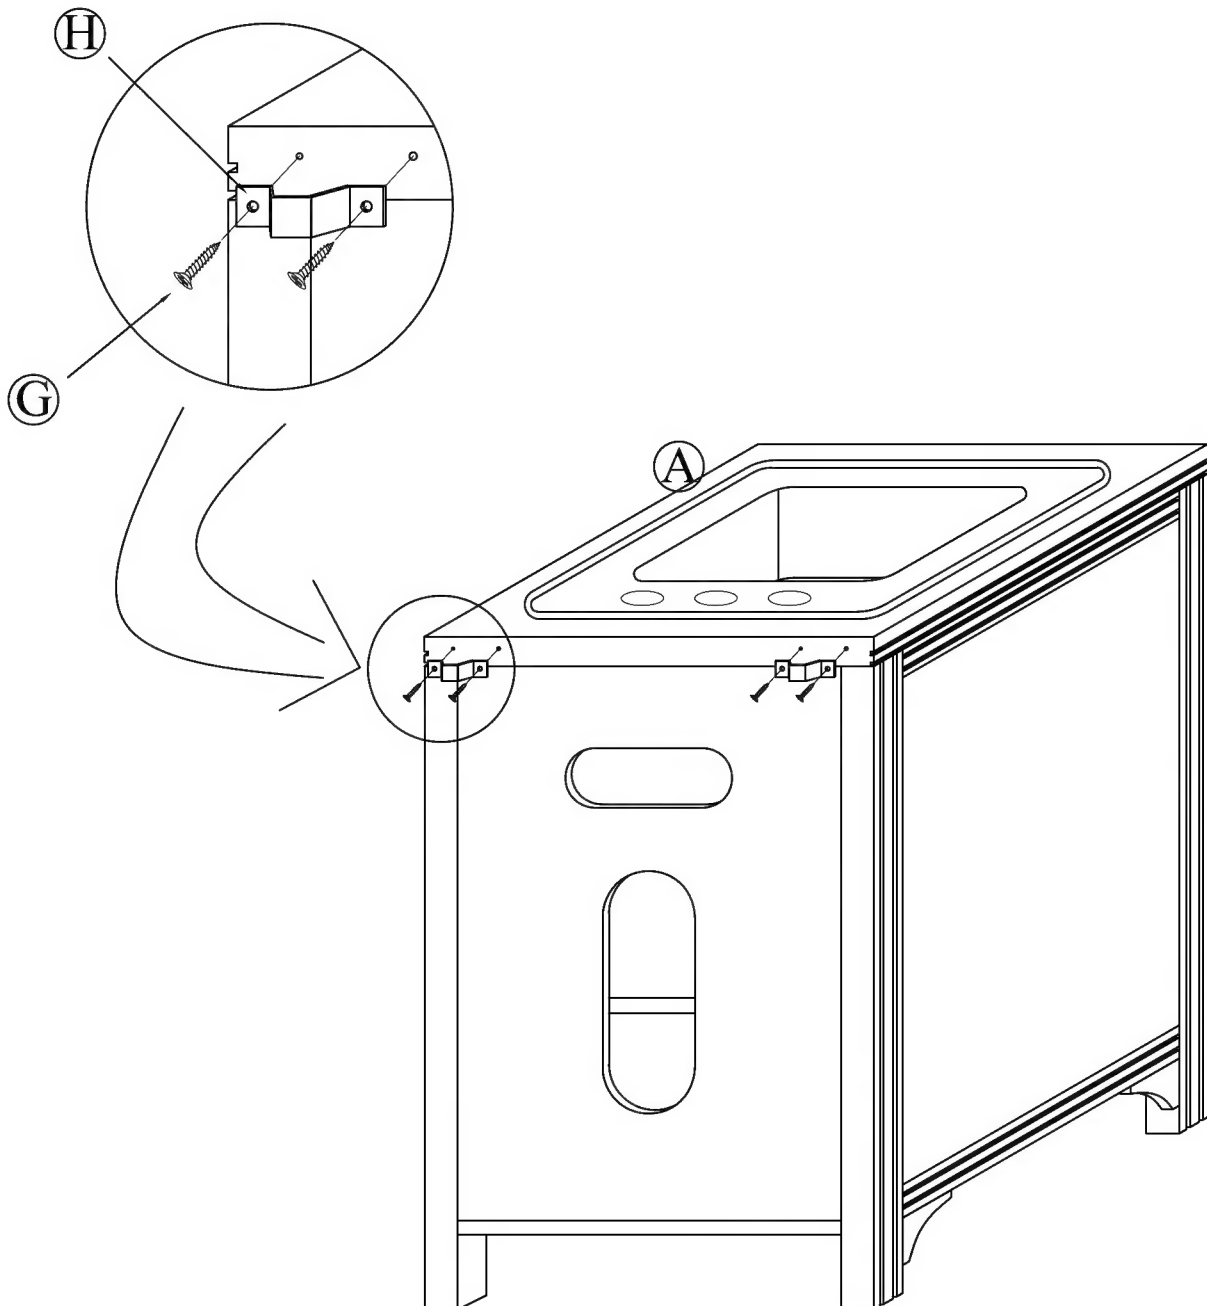

4) . ASSEMBLE THE HOOKS(H) .

- ATTACH 2 HOOKS(H) USING 4 SCREWS(G) IN THE PREDRILLED HOLES OF REAR CABINET(A) .

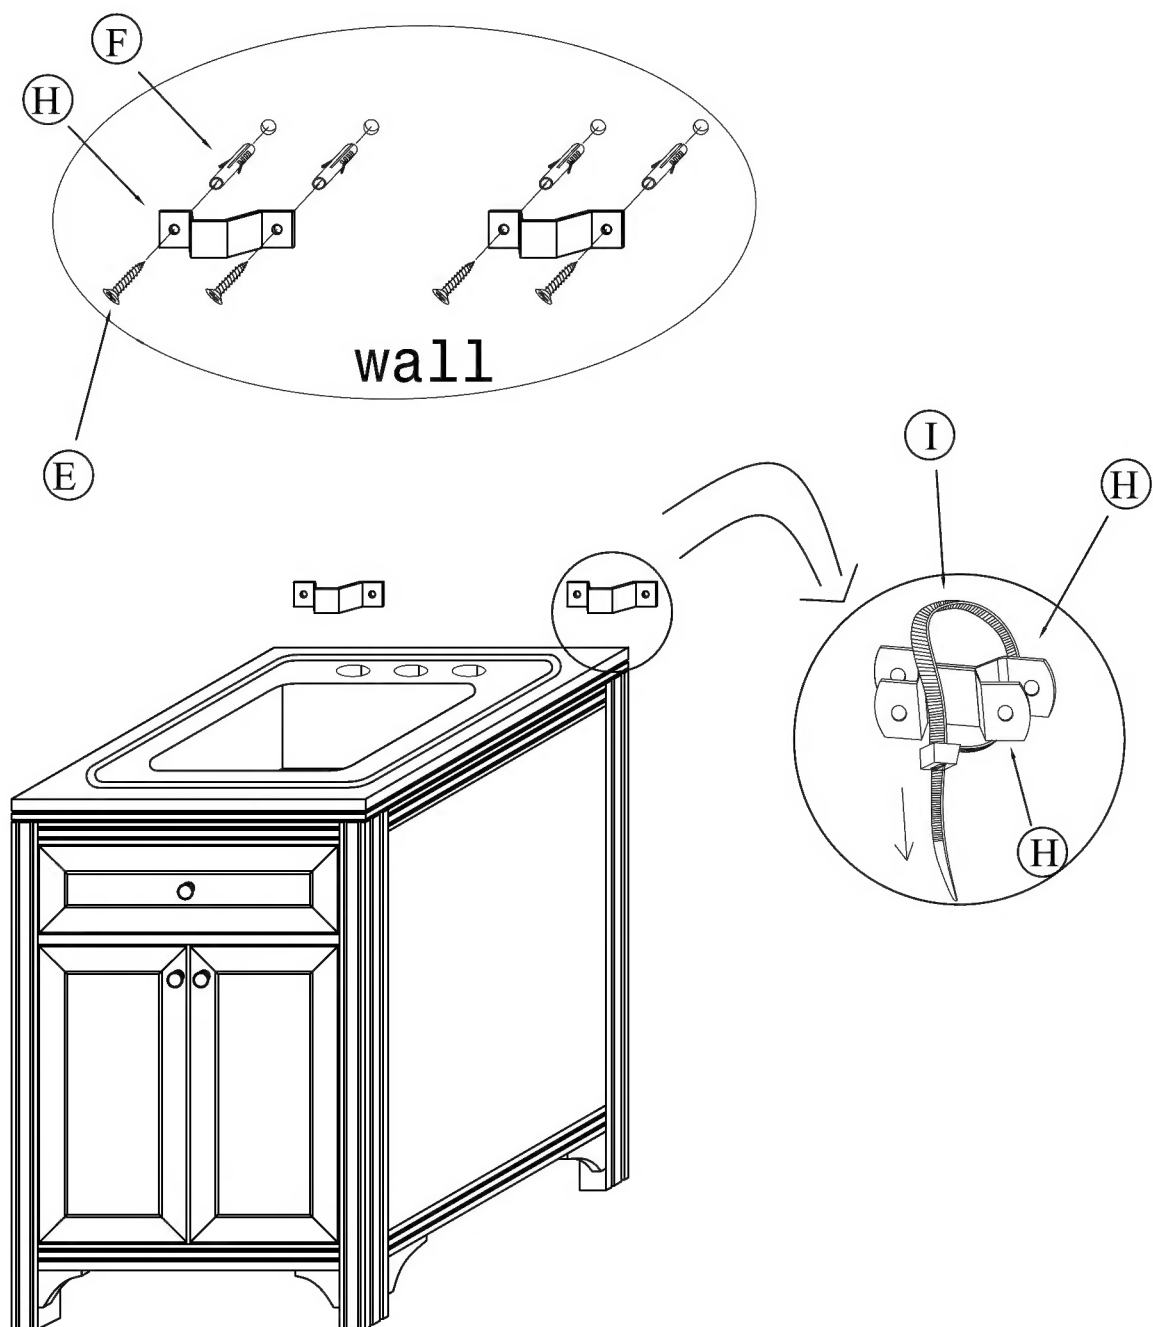

5) . ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(F) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS(E) INTO THE GECKOS(F).
- CONNECT THE TWO HOOKS(H) WITH A PLASTIC BELT(I).